



# **E49-400T20S User Manuel**

**433MHz SMD Wireless Module**



# CONTENTS

<b>1. OVERVIEW.....</b>	<b>3</b>
1.1 INTRODUCTION.....	4
1.2 FEATURES.....	4
<b>2. SPECIFICATION AND PARAMETER.....</b>	<b>5</b>
2.1 LIMIT PARAMETER.....	5
2.2 OPERATING PARAMETER.....	5
<b>3. SIZE AND PIN DEFINITION.....</b>	<b>6</b>
<b>4. RECOMMENDED WIRING DIAGRAM.....</b>	<b>7</b>
<b>5. FUNCTION DESCRIPTION.....</b>	<b>8</b>
5.1 MODULE RESET.....	8
5.2 AUX DETAILED EXPLANATION.....	8
5.2.1 Wireless receiving indication.....	8
5.2.2 Wireless transmission indication.....	8
5.2.3 Reset and exit sleep mode.....	9
5.2.4 AUX Precautions.....	9
5.2.5 Detailed explanation of fixed-point mode.....	9
5.2.6 Broadcast transmission.....	10
5.2.7 Broadcast address.....	10
5.2.8 Monitor Address.....	11
<b>6. OPERATING MODE.....</b>	<b>12</b>
6.1 MODE SWITCHING.....	12
6.2 TRANSMISSION MODE (MODE0) .....	13
6.3 RSSI MODE (MODE1) .....	13
6.4 SETTING MODE (MODE2) .....	14
6.5 SLEEP MODE (MODE3) .....	14
6.6 FAST COMMUNICATION TEST.....	14
<b>7. COMMAND FORMAT.....</b>	<b>16</b>
7.1 DEFAULT PARAMETERS.....	16
7.2 READING OPERATING PARAMETER.....	16
7.3 READING VERSION NUMBER READING.....	16
7.4 PARAMETER SETTING INSTRUCTION.....	17

<b>8. HARDWARE DESIGN.....</b>	<b>19</b>
9.1 COMMUNICATION RANGE IS TOO SHORT.....	20
9.2 MODULE IS EASY TO DAMAGE.....	20
9.3 BER(BIT ERROR RATE) IS HIGH.....	20
<b>10. WELDING OPERATION GUIDANCE.....</b>	<b>21</b>
10.1 REFLOW SOLDERING TEMPERATURE.....	21
10.2 REFLOW SOLDERING CURVE.....	22
<b>11. RELATED MODEL.....</b>	<b>22</b>
<b>12. ANTENNA GUIDE.....</b>	<b>23</b>
12.1 ANTENNA RECOMMENDATION.....	23
<b>13. BATCH PACKAGING.....</b>	<b>24</b>
<b>REVISION HISTORY.....</b>	<b>24</b>
<b>ABOUT US.....</b>	<b>25</b>

## Disclaimer and copyright notice

The information in this article, including the URL for reference, is subject to change without notice. The document is provided "as is" without warranty of any kind, including any warranty of merchantability, fitness for a particular purpose or non-infringement, and any warranty of any proposal, specification or sample referred to elsewhere. This document does not bear any liability, including any infringement of any patent rights resulting from the use of the information contained in this document. No estoppel or other license, express or implied, is granted herein for the use of intellectual property.

All the test data obtained in this paper are obtained by E-Baite laboratory, and the actual results may be slightly different.

It is hereby declared that all trade names, trade marks and registered trade marks mentioned herein are the property of their respective owners.

The right of final interpretation belongs to Chengdu Yibaite Electronic Technology Co., LTD.

## The attention

The contents of this manual may change due to product version upgrade or other reasons. E-baite Electronic Technology Co., Ltd. reserves the right to modify the contents of this manual without any notice or prompt. This manual is only used as a guide, and Chengdu Yibaite Electronic Technology Co., Ltd. makes every effort to provide accurate information in this manual, but Chengdu Yibaite Electronic Technology Co., Ltd. does not guarantee that the content of this manual is completely free of errors, and all statements, information and Suggestions in this manual do not constitute any express or implied warranty.

# 1. Overview

## 1.1 Introduction

E49-400T20S is an ultra-high cost-effective wireless module launched by Chengdu Ebyte. It has 4 operating modes. Each transmission mode has its own characteristics and can be applied to various application scenarios. E49-400T20S can perfectly support industrial-grade applications, and undergoes rigorous testing at the factory to ensure its industrial reliability and batch consistency.

The E49-400T20S supports a maximum transmission power of 20dBm. Users can set a lower output power to save power consumption. The module works at 433MHz, with TTL level output, and is compatible with 3.3V. The module has data encryption function. The data transmitted by the module in the air is random. Through strict encryption and decryption algorithms, the data interception is meaningless, the probability of interference is reduced, and the reliability and transmission efficiency are improved. Besides, it is a low-cost wireless serial transceiver module.



## 1.2 Features

- The measured communication distance can reach 2.5km;
- Maximum transmit power is 100mW, software can be adjusted in multiple stages;
- The global license-free ISM 433MHz frequency band;
- Data transmission rate :1.2Kbps~200Kbps;
- Low power consumption mode, suitable for battery application;
- GFSK modulation;
- 2.6V~5.5V power supply;
- Industrial-grade standard design, support long-term use of -40 ~ 85°C;
- Support stamp hole and IPEX interface, users can choose to use according to their needs.

## 1.3 Application Scenario

- Wearable devices;
- Security system, Positioning system;
- Wireless remote control, unmanned drone;
- Health care product;
- Wireless voice, wireless headphones;
- Automobile industry application.

## 2. Specification and parameter

### 2.1 Limit parameter


Main parameter	Performance		Remark
	Min.	Max.	
Power supply (V)	0	5.5	Voltage over 5.5V will cause permanent damage to module
Blocking power (dBm)	-	10	Chances of burn is slim when modules are used in short distance
Operating temperature (°C)	-40	85	

### 2.2 Operating parameter

Main parameter	Performance			Remark
	Min.	Typ.	Max.	
Operating voltage (V)	2.6	5	5.5	
Communication level (V)		3.3		For 5V TTL, it may be at risk of burning down
Operating temperature (°C)	-40	-	80	Industrial design
Operating frequency (MHz)	410	433	510	Support ISM band
Power consumption	TX current (mA)	91		Instant power consumption
	RX current (mA)	12		
	Sleep current (µA)	0.7		Software is shut down
Max Tx power (dBm)	-	-	20.0	
Receiving sensitivity (dBm)	-116	-118	-119	Air data rate is 1.2kbps
Air data rate (bps)	1.2k	2.4k	200k	Controlled via user's programming

Main parameter	Description	Remark
Distance for reference	2500m	Test condition : clear and open area, antenna gain: 5dBi, antenna height: 2.5m, air data rate: 1.2kbps
FIFO	54 Byte	Maximum capacity of single transmission
Cache capacity	500 Byte	
Modulation	GFSK	
Communication interface	UART serial port	
Package	SMD	
Connector	1.27mm	
Size	26*16mm	
Antenna	IPEX/Stamp hole	50 ohm impedance

### 3. Size and pin definition

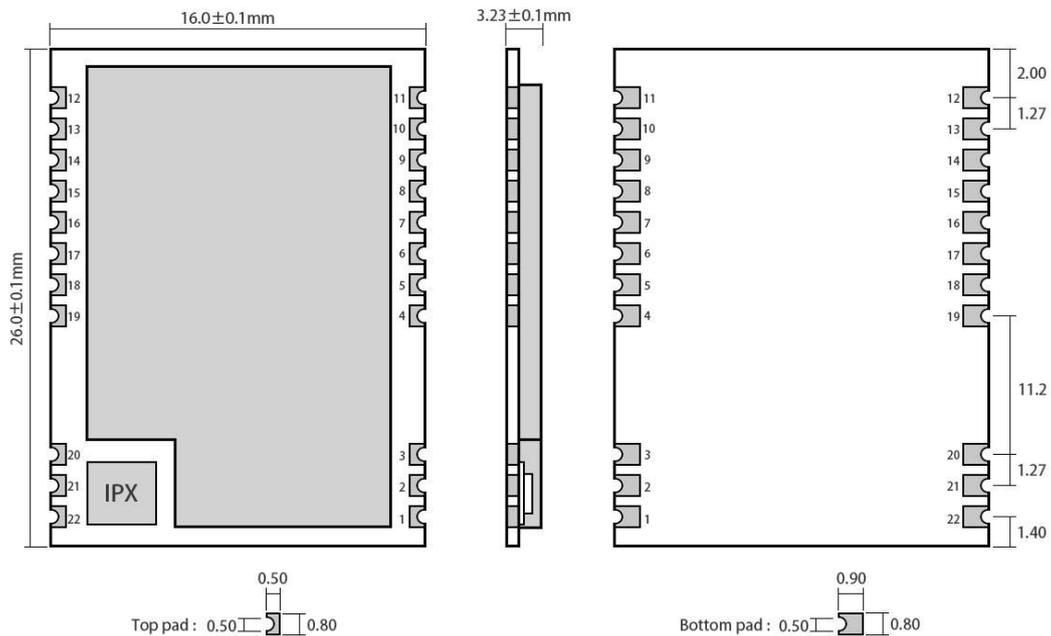


Weight : 2.0g  
Pad quantity : 22  
Unit: mm

No.	Name	Direction	Function
1	GND		Module ground wire
2	GND		Module ground wire
3	GND		Module ground wire
4	GND		Module ground wire
5	M0	Input (pull up when it's weak)	Cooperate with M1 to determine 4 operating modes of the module (can be lifted floating, the module contains pull-up resistor)
6	M1	Input (pull up when it's weak)	Cooperate with M0 to determine 4 operating modes of the module (can be lifted floating, the module contains pull-up resistor)
7	RXD	Input	TTL serial input, connect to external TXD output pin;
8	TXD	Output	TTL serial input, connect to external RXD output pin;
9	AUX	Output	Used to indicate the working status of the module; the user wakes up the external MCU and outputs a low level during the power-on self-test initialization
10	VCC		Module power supply positive reference, voltage range: 2.6V ~ 5.5V DC
11	GND		Module ground wire
12	NC		
13	GND		Module ground wire
14	NC		
15	NC		
16	NC		

17	NC		
18	NC		
19	GND		Module ground wire
20	GND		Module ground wire
21	ANT		antenna
22	GND		Module ground wire

#### 4. Recommended wiring diagram

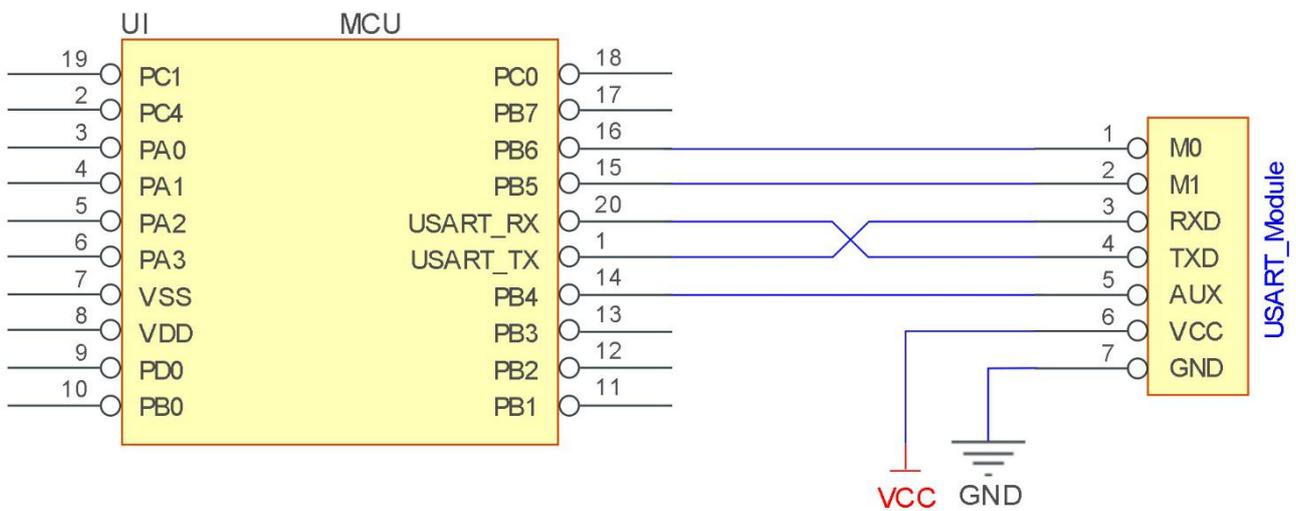

No.	Brief introduction of connection between the module and the single-chip microcomputer (the above picture uses STM8L single-chip microcomputer as an example)
1	The wireless serial port module is TTL level, please connect with MCU with TTL level.
2	Some 5V microcontrollers may require 4 ~ 10K pull-up resistors on the TXD and AUX pins of the module.

## 5. Function description

### 5.1 Module reset

After the module is powered on, AUX will immediately output a low level and perform a hardware self-test and set the operating mode according to user parameters. In this process, AUX is kept at a low level, outputs a high level after completion, and starts to work normally according to the working mode composed of M1 and M0. Therefore, users need to wait for the rising edge of AUX as the starting point for the normal operation of the module.

### 5.2 AUX detailed explanation

AUX is used for wireless sending and receiving buffer indication and self-inspection indication.

It indicates whether the data of the module that has not been transmitted through the wireless, or whether it has received wireless data that has not been transmitted through the serial port, or the module is in the process of initial self-test.


#### 5.2.1 Wireless receiving indication

After receiving the valid wireless data, the module will immediately pull AUX low and start the serial port to output data and then pull up AUX after the data output is completed.



#### 5.2.2 Wireless transmission indication

After receiving the serial port data, the module will immediately pull down AUX and start sending data wirelessly and after all the data is sent, pull up AUX.

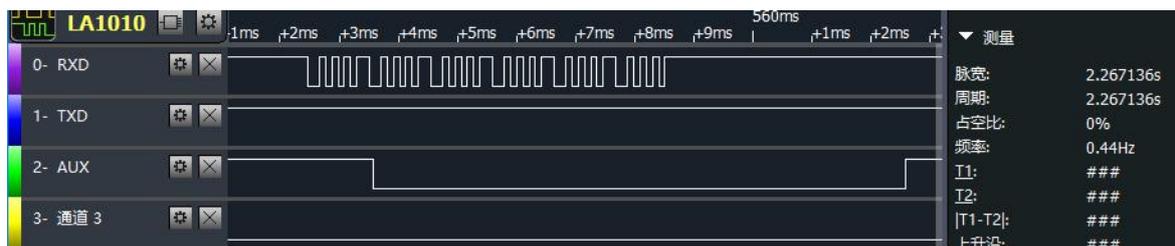

### 5.2.3 Reset and exit sleep mode

Only when resetting and exiting sleep mode



**Timing Sequence Diagram of AUX when self-check**


### 5.2.4 AUX Precautions

The function 1 and function 2 mentioned above have low output priority, that is, if any output low condition is met, AUX outputs a low level; when all low level conditions are not met, AUX outputs a high level.


When the AUX output is low, it indicates that the module is busy, and the operating mode detection will not be performed; when the AUX output is high, the mode switching will be completed.

When the user enters other modes from mode 3 (sleep mode) or during the reset process, the module will reset the user parameters, during which AUX outputs low level.

### 5.2.5 Detailed explanation of fixed-point mode

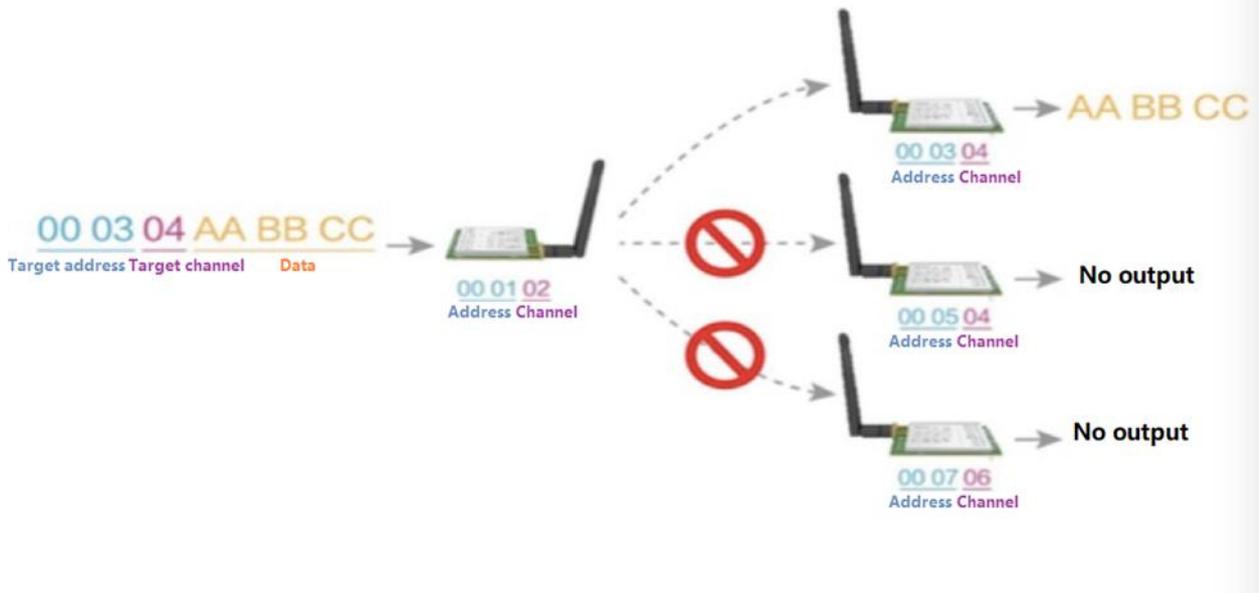

### 5.2.6 Broadcast transmission

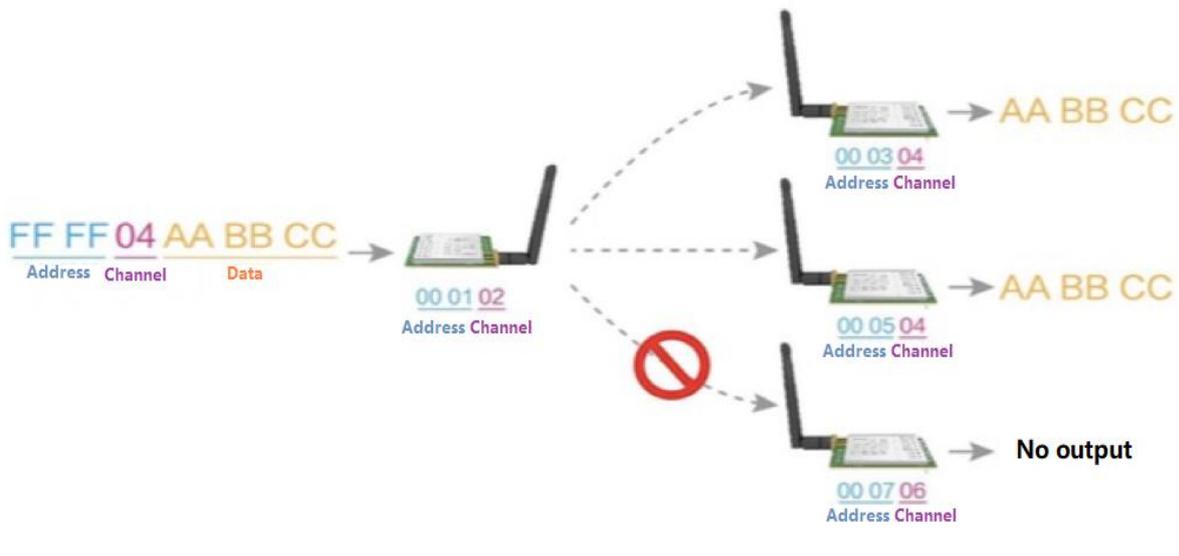

### 5.2.7 Broadcast address

Example:

- Set the address of module A to 0xFFFF and the channel to 0x04
- When module A is used for transmission (same mode, transparent transmission mode), all receiving module under the 0x04 channel can receive data to achieve the purpose of broadcasting.

## 5.2.8 Monitor Address

- Example: Set the address of module A to 0xFFFF and the channel to 0x04. When module A is used as a receiver, it can receive all the data under the 0x04 channel to achieve the purpose of monitoring.

## 6. Operating mode

The module has four operating modes, which are set by pins M0 and M1; details are shown in the table below.

Mode (0-3)	M1	M0	Mode introduction	Remark
0 Transmission mode	0	0	The serial port opens and wireless on, the module performs data transmission according to the set transmission mode	The transmission method of the sender and receiver must be consistent
1 RSSI mode	0	1	Wireless off and the serial port opens, the module outputs RSSI signal strength value at 100ms timing	Relative intensity values only
2 Setting mode	1	0	Wireless off, can receive serial port command, refer Command List, fixed baud rate 9600, 8N1	Parameter configuration
3 Sleep mode	1	1	The module goes to sleep standby mode, and the serial port and wireless are turned off.	Ultra-lower power sleep

### 6.1 Mode switching

- Users can combine M0 and M1 with high and low levels to determine the operating mode of the module. Users can use the MCU's 2 GPIOs to control the node switching; after changing M0,M1: the module is idle and after 1ms, it can start working according to the new operating mode; if the module has not transmitted serial port data via wireless, then entering the new operating mode after the transmission completed; if the module receives the wireless data and sends out the data through the serial port, it needs to finish sending before entering the new operating mode; if the module; so the mode switching can only be effective when AUX outputs 1, otherwise the switch will be delayed.
- For example: In mode 0, the user continuously inputs a large amount of data and switches the mode at the same time. The mode switching operation is invalid at this time; the module will process all the user data before performing the new mode detection; so the general recommendation is: Detect the AUX pin output status, wait for 2ms after the AUX output goes high before switching.
- When the module is switched from other modes to sleep mode, if any data has not been processed, the module will enter the sleep mode after processing the data(including receiving and sending). This feature can be used for fast sleep mode to save power consumption; for example: the transmitter module works in mode0, the user initiates serial data "12345",and then does not have to wait for the AUX pin to be idle (high level),and can directly switch to sleep mode, And the user's main MCU will immediately sleep, the module will automatically send all user data through wireless, and automatically enter sleep within 1ms; thus saving the MCU's working time and reducing power consumption.
- Similarly, any mode switch can use this feature. After processing the current mode event, the module will automatically enter the new mode within 1ms; thereby eliminating the user's query of AUX and achieving the goal of fast switching ,For example, switching from the transmission mode to the setting mode; the user MCU can also go to sleep mode in advance before the mode switching, and use the external interrupt function to

obtain the AUX change to perform the mode switching.

- This operation mode is very flexible and efficient. It is designed in accordance with the convenience of the user MCU, and can reduce the workload of the entire system as much as possible, improve system efficiency and reduce power consumption.

## 6.2 Transmission mode (Mode0)

Type	When M0 = 0, M1 = 0, module working in module0
transmission	<p>The module receives user data from the serial port, the maximum length of the wireless data packet transmitted by the module is 54 bytes, when the amount of user input data reaches 54 bytes, the module will start wireless transmission. At this time, the user can continue to enter the data that needs to be transmitted.</p> <p>When the user needs to transmit less than 54 bytes, the module waits for about 20ms. If there is no user data to continue to input, the data is considered to be terminated. At this time, the module sends all data via wireless.</p> <p>When the module receives the first user data, AUX outputs low level. When the module puts all data into the RF chip and starts transmitting, AUX outputs high level.</p> <p>At this point, it indicates that the last packet of wireless data has been transmitted, and the user can continue to enter data.</p> <p>Data packets sent through mode 0 can only be received by the receiving module in mode 0.</p>
receiving	<p>The module is on the wireless receiving function all the time and can receive data packets from mode 0.</p> <p>After receiving the data packet and the module AUX outputs a low level, it starts sending wireless data through the serial port TXD pin. After all wireless data is output through the serial port, the module outputs AUX high level.</p>

## 6.3 RSSI Mode (Mode1)

Type	When M1= 0, M1 = 0, module working in module1
transmission	No wireless transmission is allowed, the received serial data will be discarded.
receiving	<p>Can not receive air wireless data, only scan the signal strength of the current channel, and output a strength value (relative value) through the serial port every 100ms.</p> <p>Numerical calculation method: signal strength =-(256 (decimal)-data (decimal)) dBm</p> <p>If the hexadecimal value output by the serial port is 0x91, the actual signal strength is:-(256 (decimal)-145 (decimal)) =-111dBm</p>

## 6.4 Setting Mode (Mode2)

Type	When M0 = 0, M1 = 1, module working in module1
transmission	No wireless transmission is allowed, the received serial data will be discarded.
receiving	Unable to receive wireless data
configuration	Can be used for module parameter setting, use serial port 9600, 8N1, set module working parameters according to specific instruction format
	When entering from the setting mode to other modes, the module will reconfigure the parameters. During the configuration, AUX remains low level; It outputs a high level after finished, so it is recommended that the user detect the rising edge of AUX.

## 6.5 Sleep Mode (Mode3)

Type	When M0 = 1, M1 = 1, module working in module3
transmission	Unable to transmit wireless data
receiving	Unable to receive wireless data
others	When the module is in the ultra-low power state, all other functions of are turned off, and the sleep mode can only be exited through the state switch of M1M0.

## 6.6 Fast communication test

Step	Specific operation
1	Connect E49-400T20S module to the E49-TBL test board, and then plug into the USB test board (E15-USB-T2), plug into the computer to ensure that the driver has been installed correctly; Plug in the mode selection jumper cap on the USB test board ( M1 = 0, M0 = 0),
2	Select 5V (the module supports 2.6 ~ 5.5V).
3	Run the "Serial Debug Assistant" software and select the correct serial port number and observe the sending window and the corresponding receiving window



## 7. Command format

Command mode (Mode 2: M0 = 0, M1 = 1), the list of supported commands is as follows (when set, only 9600, 8N1 format is supported):

No.	Instruction format	Detailed description
1	C0+operating parameter	Send C0 + 5 byte working parameters in hexadecimal format, a total of 6 bytes and must be sent continuously (save when power off)
2	C1+C1+C1	Send three C1s in hexadecimal format. The module returns the saved parameters and must be sent continuously.
3	C2+operating parameter	Send C2 + 5 bytes working parameter in hexadecimal format, a total of 6 bytes and must be sent continuously(do not save when power off)
4	C3+C3+C3	Send three C3s in hexadecimal format. The module returns version information and must be sent continuously.

### 7.1 Default parameters

Model	Factory default parameter value: C0 00 00 19 2E 00					
Module type	Frequency	Address	Channel	Air rate	Baud rate	Transmitting power
E49-400T20S	433MHz	0x0000	0x2E	2.4kbps	9600	20

### 7.2 Reading operating parameter

Instruction format	Detailed description
C1+C1+C1	In the setting mode (M0 = 0, M1 = 1), issue a command to the module serial port (HEX format): C1 C1 C1, The module will return the current configuration parameters, such as: C0 00 00 18 20 00

### 7.3 Reading version number reading

Instruction format	Detailed description
C3+C3+C3	In the setting mode (M0 = 0, M1 = 1), issue a command to the module serial port (HEX format): C3 C3 C3, The module will return the current configuration parameters, such as: C3 49 xx yy; 49 here represents the module model (E49 series), xx is the version number, and yy refers to other features of the module (users can ignore).

## 7.4 Parameter setting instruction

No.	Item	Description	Remark
0	HEAD	Fix 0xC0 or 0xC2, it means this frame data is control command	<ul style="list-style-type: none"> <li>Must be 0xC0 or 0xC2</li> </ul> C0: Save the parameters when power-down C2: Do not save the parameters when power-down
1	ADDH	High address byte of module ( the default 00H )	00H-FFH
2	ADDL	Low address byte of module ( the default 00H )	00H-FFH
3	SPED	Rate parameters, including serial rate and air rate 7, 6: Serial parity bit 00: 8N1 (default) 01: 8O1 10: 8E1 11: 8N1 ----- 5, 4, 3 TTL serial speed (bps) 000: Serial baud rate is 1200 001: The serial port baud rate is 2400 010: The serial port baud rate is 4800 011: Serial baud rate is 9600 (default) 100: The serial port baud rate is 19200 101: Serial baud rate is 38400 110: Serial baud rate is 57600 111: Serial baud rate is 115200 -----	-----UART baud rate can be different between communication parties The UART baud rate has nothing to do with wireless transmission parameters & won't affect the wireless transmit / receive features. ----- ----- <ul style="list-style-type: none"> <li>The lower the air data rate, the longer the transmitting distance, better anti-interference performance and</li> </ul>

		<p>2, 1, 0 Wireless air rate (bps)</p> <p>000: The air rate is 1.2k</p> <p>001: The air speed is 2.4k (default)</p> <p>010: The air speed is 4.8k</p> <p>011: The air speed is 9.6k</p> <p>100: The air speed is 19.2k</p> <p>101: The air speed is 50k</p> <p>110: The air speed is 100k</p> <p>111: 200k air speed</p>	<p>longer transmitting time</p> <ul style="list-style-type: none"> <li>The air data rate must keep the same for both communication parties.</li> </ul>
4	CHAN	<p>7, 6, 5, 4, 3, 2, 1, 0 Communication channel</p> <p>Communication frequency (410M + CHAN * 0.5M)</p> <p>(Default 0x2E: 433M)</p>	<p>-----</p> <ul style="list-style-type: none"> <li>00H-C8H ,</li> <li>correspond to 410~510 MHz</li> </ul>
5	OPTION	<p>7; Fixed transmission enabling bit ( similar to MODBUS )</p> <p>0 : Transparent transmission mode</p> <p>1 : Fixed transmission mode</p> <p>-----</p> <p>6, 5, 4, 3, 2 Reserved bit, write 0</p> <p>-----</p> <p>1, 0 Transmission power (approximation)</p> <p>00: 20 dBm (default)</p> <p>01: 17 dBm</p> <p>10: 14 dBm</p> <p>11: 10 dBm</p>	<ul style="list-style-type: none"> <li>In fixed transmission mode, the first three bytes of each user's data frame can be used as high/low address and channel. The module changes its address and channel when transmit. And it will revert to original setting after complete the process.</li> </ul> <p>-----</p> <p>The external power must make sure the ability of current output more than 1A and ensure the power supply ripple within 100mV.</p> <p>Low power transmission is not recommended due to its low power supply efficiency.</p>

**For example: The meaning of No.3 "SPED" byte:**

The binary bit of the byte	7	6	5	4	3	2	1	0
Configures by user	0	0	0	1	1	0	0	1
Meaning	UART parity bit 8N1			UART baud rate is 9600			Air data rate is 2.4k	
Corresponding hexadecimal	1				9			

## 8. Hardware design

- It is recommended to use a DC stabilized power supply. The power supply ripple factor is as small as possible, and the module needs to be reliably grounded. ;
- Please pay attention to the correct connection of the positive and negative poles of the power supply. Reverse connection may cause permanent damage to the module ;
- Please check the power supply to ensure it is within the recommended voltage otherwise when it exceeds the maximum value the module will be permanently damaged ;
- Please check the stability of the power supply, the voltage can not be fluctuated frequently ;
- When designing the power supply circuit for the module, it is often recommended to reserve more than 30% of the margin, so the whole machine is beneficial for long-term stable operation. ;
- The module should be as far away as possible from the power supply, transformers, high-frequency wiring and other parts with large electromagnetic interference. ;
- High-frequency digital routing, high-frequency analog routing, and power routing must be avoided under the module. If it is necessary to pass through the module, assume that the module is soldered to the Top Layer, and the copper is spread on the Top Layer of the module contact part(well grounded), it must be close to the digital part of the module and routed in the Bottom Layer ;
- Assuming the module is soldered or placed over the Top Layer, it is wrong to randomly route over the Bottom Layer or other layers, which will affect the module's spurs and receiving sensitivity to varying degrees ;
- It is assumed that there are devices with large electromagnetic interference around the module that will greatly affect the performance. It is recommended to keep them away from the module according to the strength of the interference. If necessary, appropriate isolation and shielding can be done ;
- Assume that there are traces with large electromagnetic interference (high-frequency digital, high-frequency analog, power traces) around the module that will greatly affect the performance of the module. It is recommended to stay away from the module according to the strength of the interference. If necessary, appropriate isolation and shielding can be done.
- If the communication line uses a 5V level, a 1k-5.1k resistor must be connected in series (not recommended, there is still a risk of damage) ;
- Try to stay away from some physical layers such as TTL protocol at 2.4GHz , for example: USB3.0 ;
- The mounting structure of antenna has a great influence on the performance of the module. It is necessary to ensure that the antenna is exposed, preferably vertically upward. When the module is mounted inside the case, use a good antenna extension cable to extend the antenna to the outside ;
- The antenna must not be installed inside the metal case, which will cause the transmission distance to be greatly weakened.

## 9. FAQ

### 9.1 Communication range is too short

- The communication distance will be affected when obstacle exists.
- Data lose rate will be affected by temperature, humidity and co-channel interference.
- The ground will absorb and reflect wireless radio wave, so the performance will be poor when testing near ground.
- Sea water has great ability in absorbing wireless radio wave, so performance will be poor when testing near the sea.
- The signal will be affected when the antenna is near metal object or put in a metal case.
- Power register was set incorrectly, air data rate is set as too high (the higher the air data rate, the shorter the distance).
- The power supply low voltage under room temperature is lower than 2.5V, the lower the voltage, the lower the transmitting power.
- Due to antenna quality or poor matching between antenna and module.

### 9.2 Module is easy to damage

- Please check the power supply to ensure that it is between the recommended power supply voltage. If the maximum value is exceeded, the module will be permanently damaged.
- Please check the stability of power source, the voltage cannot fluctuate too much.
- Please make sure anti-static measure are taken when installing and using, high frequency devices have electrostatic susceptibility.
- Please ensure the humidity is within limited range, some parts are sensitive to humidity.
- Please avoid using modules under too high or too low temperature.

### 9.3 BER(Bit Error Rate) is high


- There are co-channel signal interference nearby, please be away from interference sources or modify frequency and channel to avoid interference;
- Poor power supply may cause messy code. Make sure that the power supply is reliable.
- The extension line and feeder quality are poor or too long, so the bit error rate is high;

## 10. Welding operation guidance

### 10.1 Reflow Soldering Temperature

Profile Feature	Curve feature	Sn-Pb Assembly	Pb-Free Assembly
Solder Paste	Solder paste	Sn63/Pb37	Sn96.5/Ag3/Cu0.5
Preheat Temperature min (T <sub>min</sub> )	Minimum preheating temperature	100°C	150°C
Preheat temperature max (T <sub>max</sub> )	Maximum preheating temperature	150°C	200°C
Preheat Time (T <sub>min</sub> to T <sub>max</sub> )(ts)	Preheating time	60-120 sec	60-120 sec
Average ramp-up rate(T <sub>max</sub> to T <sub>p</sub> )	Average rising rate	3°C/second max	3°C/second max
Liquidous Temperature (TL)	Liquid phase temperature	183°C	217°C
Time (t <sub>L</sub> ) Maintained Above (TL)	Time above liquidus	60-90 sec	30-90 sec
Peak temperature (T <sub>p</sub> )	Peak temperature	220-235°C	230-250°C
Average ramp-down rate (T <sub>p</sub> to T <sub>max</sub> )	Average descent rate	6°C/second max	6°C/second max
Time 25°C to peak temperature	Time of 25 ° C to peak temperature	6 minutes max	8 minutes max

## 10.2 Reflow Soldering Curve

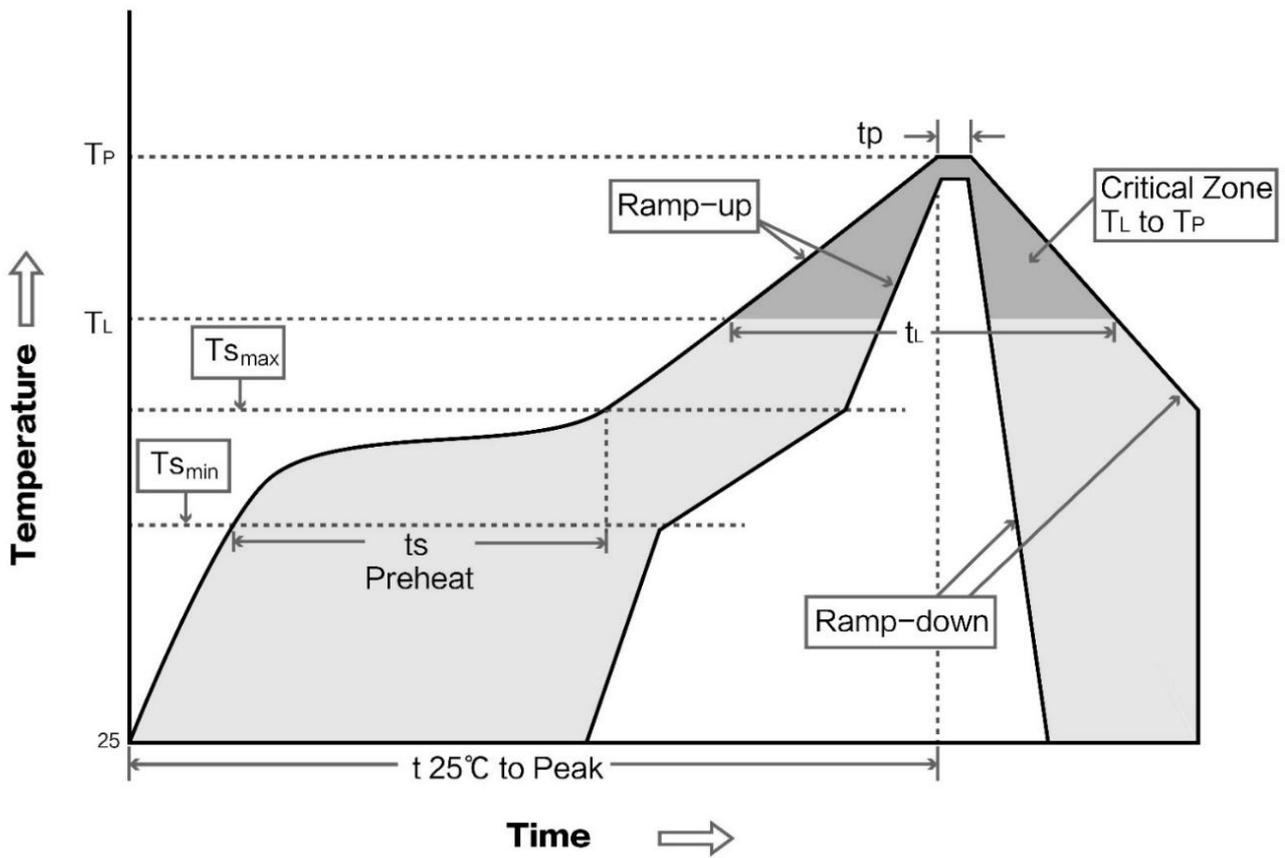

## 11. Related Model

Model	Chip	Frequency Hz	Transmit power dBm	Test distance km	Air rate bps	Packaging	Size mm	Antenna
E49-400T20S	-	433M	20	1	1.2k~200k	SMD	26 * 16	IPEX/stamp hole

## 12. Antenna guide


### 12.1 Antenna recommendation

Antennas play an important role in the communication process, usually low-quality antennas will greatly affect the communication system. Therefore, we recommend some antennas as supporting antennas of our company with excellent performance and reasonable price.

Model	Type	Frequency Hz	Interface	Gain dBi	Height	Feeder	Function
TX433-NP-4310	Flexible PCB antenna	433M	SMA-J	2	43.8*9.5mm	-	Built-in flexible, FPC soft antenna
TX433-JW-5	Glue stick antenna	433M	SMA-J	2	50mm	-	Bendable glue stick, omnidirectional antenna
TX433-JWG-7	Glue stick antenna	433M	SMA-J	2.5	75mm	-	Bendable glue stick, omnidirectional antenna
TX433-JK-20	Glue stick antenna	433M	SMA-J	3	210mm	-	Bendable glue stick, omnidirectional antenna
TX433-JK-11	Glue stick antenna	433M	SMA-J	2.5	110mm	-	Bendable glue stick, omnidirectional antenna
TX433-XP-200	Sucker antenna	433M	SMA-J	4	19cm	200cm	Sucker antenna, high gain
TX433-XP-100	Sucker antenna	433M	SMA-J	3.5	18.5cm	100cm	Sucker antenna, high gain
TX433-XP-300	Sucker antenna	433M	SMA-J	6	96.5cm	300cm	Car mounted sucker antenna, super high gain
TX433-JZG-6	Glue stick antenna	433M	SMA-J	2.5	52mm	-	Ultra-short straight, omnidirectional antenna
TX433-JZ-5	Glue stick antenna	433M	SMA-J	2	52mm	-	Ultra-short straight, omnidirectional antenna
TX490-XP-100	Sucker	490M	SMA-J	50	12cm	100cm	Sucker antenna, high gain

	antenna						
TX490-JZ-5	Glue stick antenna	490M	SMA-J	50	50mm	-	Ultra-short straight, omnidirectional antenna

### 13. Batch packaging

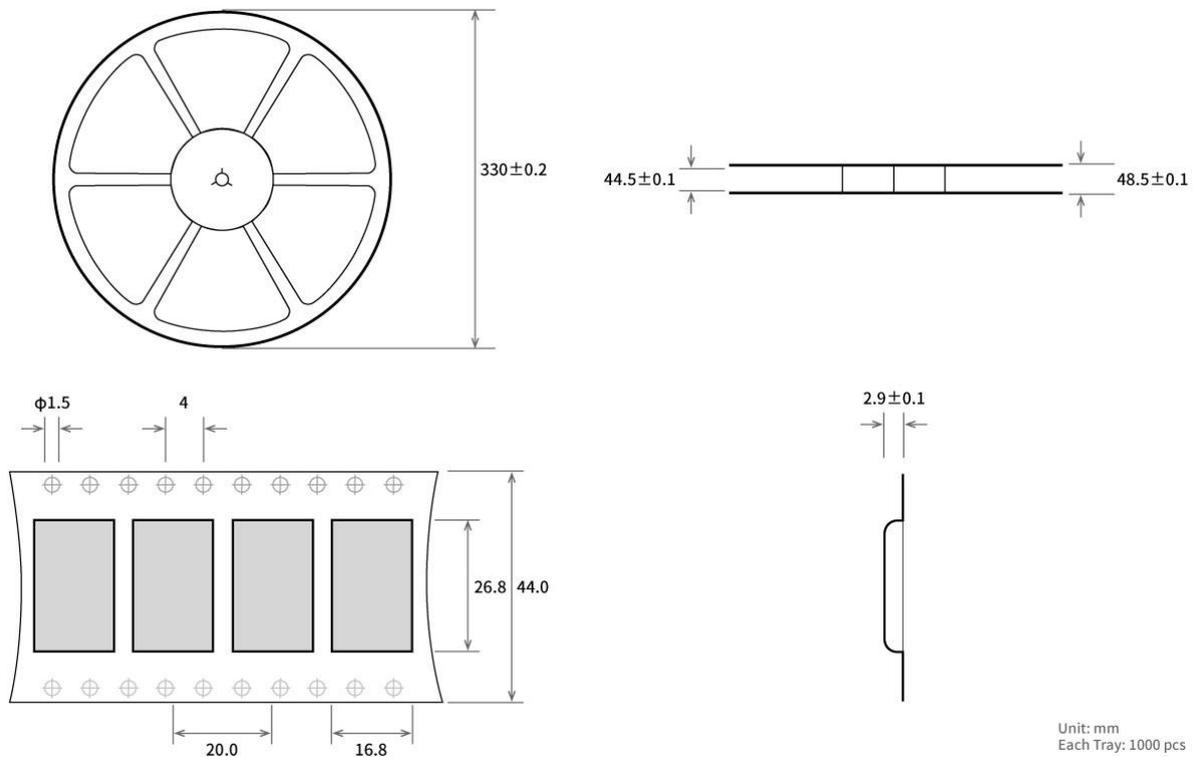

### Revision history

Version	Date	Description	Issued by
V1.1	2019-11-28	Format adjustment	Ren
V1.2	2020-11-16	Parameter correction	Linson
V1.3	2021-6-23	Error correction	Linson

## About us

Sales hotline: 4000-330-990

Tel: 028-61399028

Support: [support@cdebyte.com](mailto:support@cdebyte.com)

Website: [www.ebyte.com](http://www.ebyte.com)

Address: Innovation Center B333~D347, 4# XI-XIN road, High-tech district (west), Chengdu, Sichuan, China

 **Chengdu Ebyte Electronic Technology Co.,Ltd.**