



E30-433T20S3 User Manual

SI4438 433MHz 100mW SMD Wireless Module



成都亿佰特电子科技有限公司
Chengdu Ebyte Electronic Technology Co.,Ltd.

CONTENTS

1. OVERVIEW.....	1
1.1 INTRODUCTION.....	1
1.2 FEATURES.....	1
1.3 APPLICATION.....	2
1.4 FUNCTION INTRODUCTION.....	2
2. SPECIFICATION AND PARAMETER.....	2
2.1 LIMIT PARAMETER.....	2
2.2 OPERATING PARAMETER.....	2
3. SIZE AND PIN DEFINITION.....	3
4. CONNECT TO MCU.....	5
5. FUNCTION DESCRIPTION.....	5
5.1 FIXED TRANSMISSION.....	5
5.2 BROADCASTING TRANSMISSION.....	6
5.3 BROADCASTING ADDRESS.....	6
5.4 MONITOR ADDRESS.....	6
5.5 RESET.....	6
5.6 AUX DESCRIPTION.....	7
5.6.1 Indication of UART output.....	7
5.6.2 Indication of wireless transmitting.....	7
5.6.3 Configuration procedure of module.....	8
5.6.4 Notes for AUX.....	8
6. OPERATING MODE.....	8
6.1 MODE SWITCHING.....	9
6.2 NORMAL MODE (MODE 0)	9
6.3 WAKE UP MODE (MODE 1)	10
6.4 POWER-SAVING MODE (MODE 2)	10
6.5 DEEP SLEEP MODE (MODE 3)	10
7. REGISTER READ AND WRITE CONTROL.....	11
7.1 COMMAND FORMAT.....	11
7.2 FACTORY DEFAULT PARAMETER.....	11
7.3 READING OPERATING PARAMETERS.....	11
7.4 READING VERSION NUMBER.....	12
7.5 RESET INSTRUCTION.....	12
7.6 PARAMETER SETTING INSTRUCTION.....	12
8. HARDWARE DESIGN.....	14
9. FAQ.....	15
9.1 COMMUNICATION RANGE IS TOO SHORT.....	15
9.2 MODULE IS EASY TO DAMAGE.....	15

9.3 BER(BIT ERROR RATE) IS HIGH.....	16
10. PRODUCTION GUIDANCE.....	16
10.1 REFLOW SOLDERING TEMPERATURE.....	16
10.2 REFLOW SOLDERING CURVE.....	17
11. E30 SERIES.....	17
12. ANTENNA RECOMMENDATION.....	18
13. PACKAGE FOR BATCH ORDER.....	19
14.REVISION HISTORY.....	19
15.ABOUT US.....	19

1. Overview

1.1 Introduction

E30-433T20S3 is a UART module based on Silicon Labs' SI4438. It features half-duplex with transparent transmission, SMD packing, TTL level output, WOR and 433MHz working frequency. This product has been mass-produced and can be used in a wide range of environments and industries.

The module has a software FEC forward error correction algorithm, which has high coding efficiency and strong error correction capability. In the case of sudden interference, it can actively correct the interfered data packets, greatly improving reliability and transmission distance. When without FEC, such packets can only be discarded. The module has data encryption. Data transmitted over the air, with randomness, makes data interception meaningless through strict encryption and decryption algorithms. The function of data compression decreases the transmission time & probability of being interfered, while improving the reliability & transmission efficiency.



1.2 Features

- Communication distance tested is up to 2.5km
- Maximum transmission power of 100mW, software multi-level adjustable;
- Support the global license-free ISM 433MHz band;
- Support air data rate of 1kbps ~ 25kbps Mbps;
- Low power consumption for battery supplied applications;
- Support 2.3V~5.2V power supply, power supply over 3.3V can guarantee the best performance;
- Industrial grade standard design, support -40 ~ 85 °C for working over a long time;
- IPEX and stamp hole optional, good for secondary development and integration

1.3 Application

- Home security alarm and remote keyless entry;
- Smart home and industrial sensors;
- Wireless alarm security system;
- Building automation solutions;
- Wireless industrial-grade remote control;
- Intelligent agriculture & oil field solution;
- Health care products;
- Advanced Meter Reading Architecture(AMI);
- Automotive industry applications.

1.4 Function introduction

2. Specification and parameter

2.1 Limit parameter


Main parameter	Performance		Remark
	Min.	Max.	
Power supply (V)	0	5.2	Voltage over 5.2V will cause permanent damage to module
Blocking power (dBm)	-	10	Chances of burn is slim when modules are used in short distance
Operating temperature (°C)	-40	85	/

2.2 Operating parameter

Main parameter		Performance			Remark
		Min.	Typ.	Max.	
Operating voltage (V)		2.3	5.0	5.2	≥5.0V ensures output power
Communication level (V)			3.3		For 5V TTL, it may be at risk of burning down
Operating temperature (°C)		-40	-	85	Industrial design
Operating frequency (MHz)		425	-	450.5	Support ISM band
Power consumption	TX current (mA)		88		Instant power consumption
	RX current (mA)		16		
	Sleep current (μA)		4		Software is shut down
Max Tx power (dBm)		19.3	20.0	20.6	
Receiving sensitivity (dBm)		-113	-114	-115	Air data rate is 1.0 kbps
Air data rate (bps)		1k	5k	25k	Controlled via user's programming

Main parameter	Description	Remark
Distance for reference	2500m	Test condition: clear and open area, antenna gain: 5dBi, antenna height: 2.5m, air data rate: 2.4kbps
TX length	58 Byte	The maximum capacity of a single package
Buffer	512 Byte	
Modulation	GFSK	
Communication interface	TTL	
Package	SMD	
Connector	1.27mm	
Size	16 * 26 mm	
Antenna	IPEX/stamp hole	50 ohm impedance


3. Size and pin definition

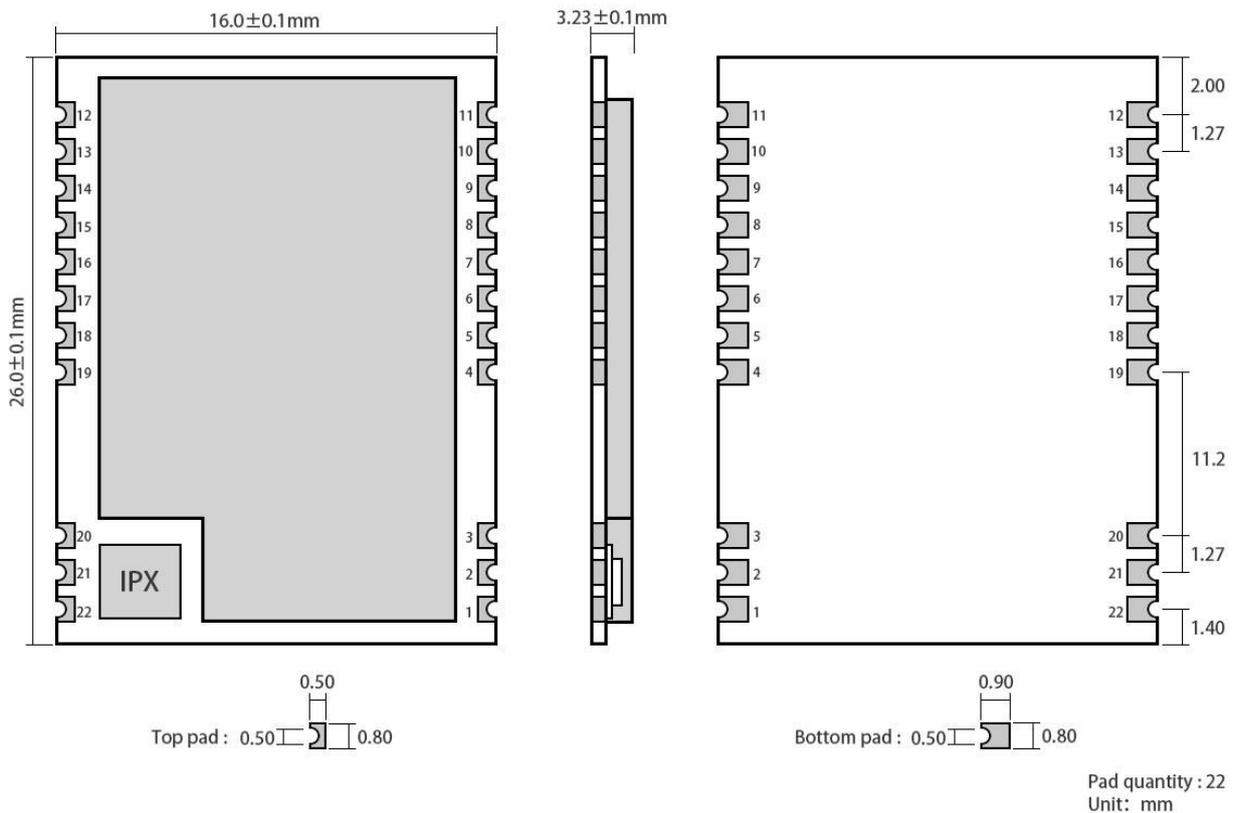

No.	Name	Direction	Function
-----	------	-----------	----------

1	GND		Ground
2	GND		Ground
3	GND		Ground
4	GND		Ground
5	M0	Input (weak pull-up)	Work with M1 to decide 4 working modes of module (not suspended, if not used, could be grounded).
6	M1	Input (weak pull-up)	Work with M0 to decide 4 working modes of module (not suspended, if not used, could be grounded).
7	RXD	Input	TTL UART inputs, connects to external (MCU, PC) TXD output pin. Can be configured as open-drain or pull-up input.
8	TXD	Output	TTL UART outputs, connects to external RXD (MCU, PC) input pin. Can be configured as open-drain or push-pull output
9	AUX	Output	To indicate module 's working status & wakes up the external MCU. During the procedure of self-check initialization, the pin outputs low level. Can be configured as push-pull output (suspending is allowed).
10	VCC		Power supply : 2.3~ 5.2V DC
11	GND		Ground
12	NC		
13	GND		Ground
14	NC		
15	NC		
16	NC1		
17	NC2		
18	NC3		
19	GND		Ground
20	GND		Ground
21	ANT		Antenna
22	GND		Ground


4. Connect to MCU

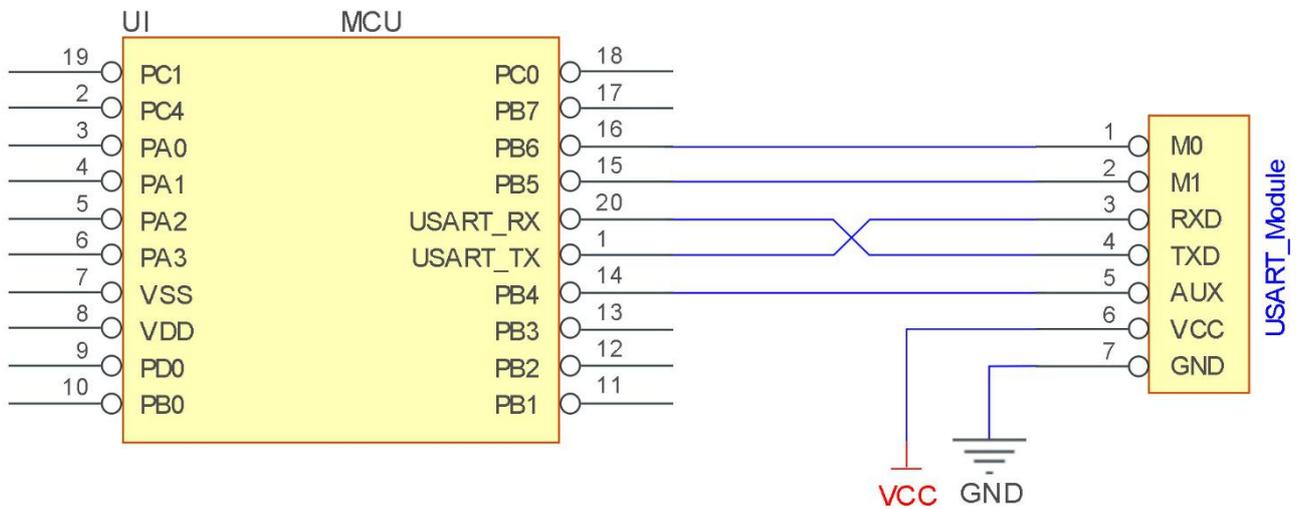

No.	Description (STM8L MCU)
1	The UART module is TTL level.
2	For some MCU works at 5VDC, it may need to add 4-10K pull-up resistor for the TXD & AUX pin.

5. Function description

5.1 Fixed transmission

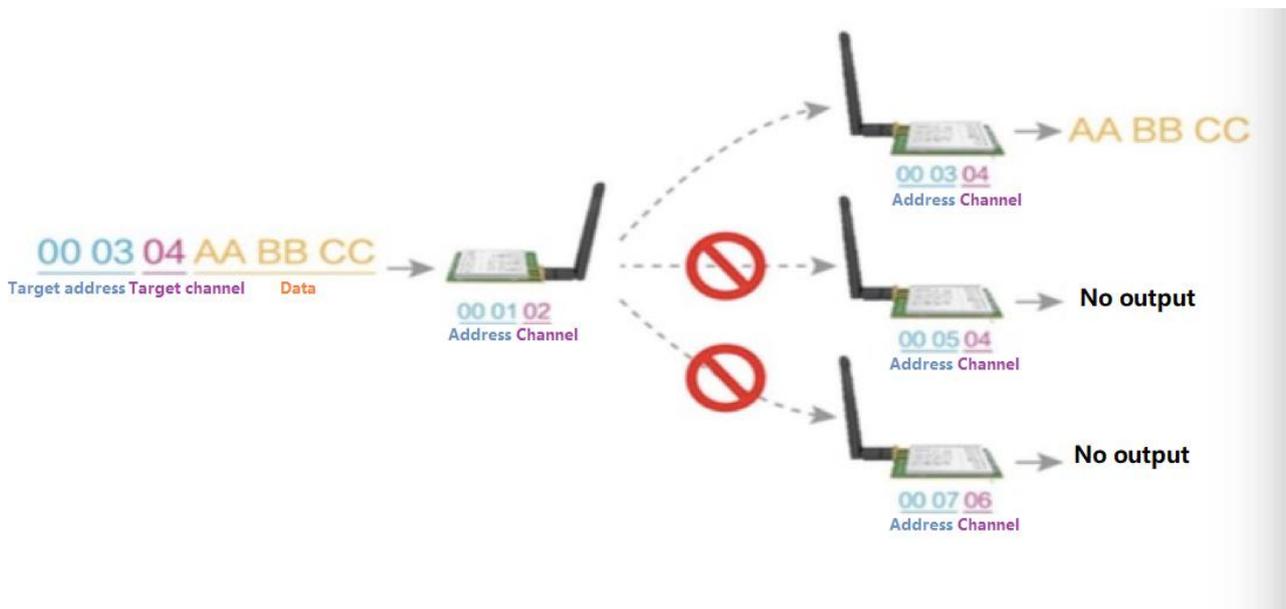

5.2 Broadcasting transmission



5.3 Broadcasting address

- For example: Set the address of module A as `0xFFFF` or `0x0000`, and the channel as `0x04`;
- When module is the transmitter (transparent transmission), all modules under channel `0x04` will receive the data, the purpose of broadcast is realized.

5.4 Monitor address

- For example: Set the address of module A as `0xFFFF` or `0x0000`, and the channel as `0x04`;
- When module A is the receiver, it can receive the data sent from all modules under channel `0x04`, the purpose of monitor is realized.

5.5 Reset


When the module is powered, AUX outputs low level immediately, conducts hardware self-check and sets the operating mode based on user's parameters. During the process, the AUX remains low level. After the process completed, the AUX outputs high level and starts to work as per the operating mode combined by M1 and M0. Therefore, users need to wait the AUX rising edge as the start of module's normal work.

5.6 AUX description

- AUX Pin can be used as indication for wireless send & receive buffer and self-check.
- It can indicate whether there are data that are not sent yet via wireless way, or whether all wireless data has been sent through UART, or whether the module is still in the process of self-check initialization.

5.6.1 Indication of UART output


- To wake up external MCU

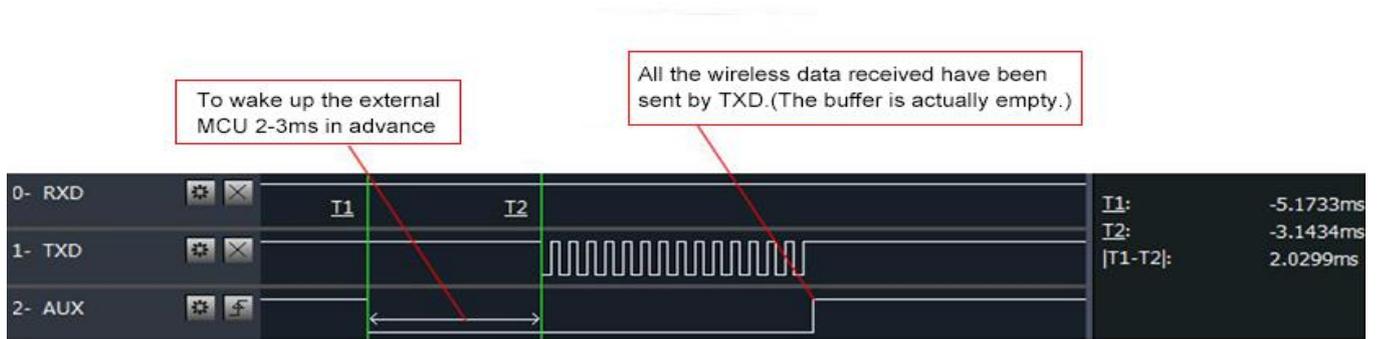

Timing Sequence Diagram of AUX when TXD pin transmits

5.6.2 Indication of wireless transmitting

Buffer (empty): the internal 512 bytes data in the buffer are written to the RFIC (Auto sub-packaging). When AUX=1, the user can input data less than 512 bytes continuously without overflow. Buffer (not empty): when AUX=0, the internal 512 bytes data in the buffer have not been written to the RFIC completely. If the user starts to transmit data at this circumstance, it may cause overtime when the module is waiting for the user data, or transmitting wireless sub package. When AUX = 1, it does not mean that all the UART data of the module have been transmitted already, perhaps the last packet of data is still in transmission.

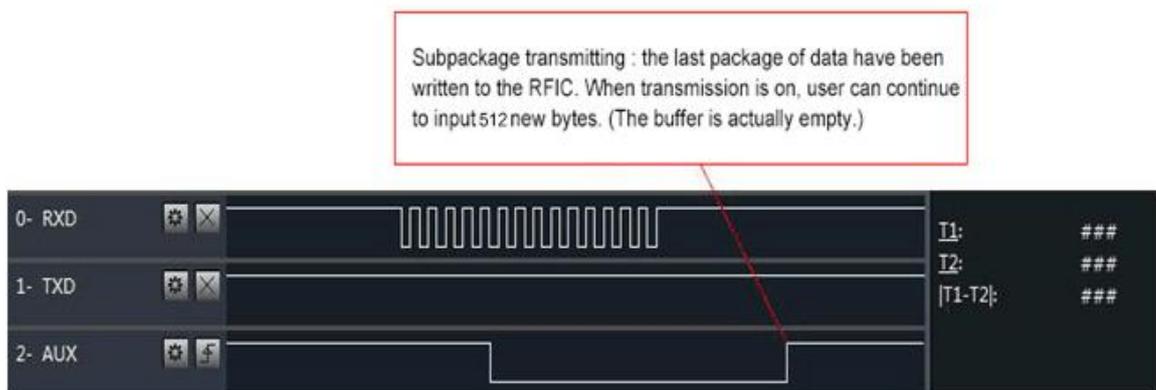

Timing Sequence Diagram of AUX when RXD pin receives

5.6.3 Configuration procedure of module

- Only happened when power-on resetting or exiting sleep mode



Timing Sequence Diagram of AUX when self-check

5.6.4 Notes for AUX

No.	Description
1	For function 1 & function 2 mentioned above, the priority should be given to the one with low level output, which means if it meets each of any low level output condition, AUX outputs low level, if none of the low level condition is met, AUX outputs high level.
2	When AUX outputs low level, it means the module is busy & cannot conduct operating mode checking. Within 1ms since AUX outputs high level, the mode switch will be completed.
3	After switching to new operating mode, it will not work in the new mode immediately until AUX rising edge lasts for 2ms . If AUX stays on the high level, the operating mode switch can be effected immediately.
4	When the user switches to other operating modes from mode 3 (sleep mode) or it's still in reset process, the module will reset user parameters, during which AUX outputs low level.

6. Operating mode

There are four operating modes, which are set by M1 and M0, the details are as follows:

Mode(0-3)	M1	M0	Description	Remark
0 Normal mode	0	0	UART and wireless channel are open, transparent transmission is on	The receiver must work in mode 0 or mode 1
1 Wake-up	0	1	UART and wireless channel are open. The difference between normal mode and wake-up mode is that it will add preamble code automatically before data packet transmission so that it can awaken the receiver works in mode 2	The receiver can work in mode 0, mode 1 or mode 2
2 Power-saving Mode	1	0	Users can access the register through the serial port to control the working state of the module	1. The transmitter must work in mode 1 2. Transmitting is not allowed in this mode
3 sleep mode	1	1	Parameter setting	More in working parameter

6.1 Mode switching

No.	Remark
1	<ul style="list-style-type: none"> ● Users can combine M1 and M0 with high and low levels to determine the operating mode. Two GPIOs of the MCU can be used to control mode switching; ● After changing M1 and M0: If the module is idle, after 1ms, it can start working according to the new mode; ● If the serial port data of the module has not been transmitted through the wireless, the new working mode can be switched after the transmission is completed; ● If the module receives the wireless data and transmits the data through the serial port, it needs to finish transmission before switching the new working mode; ● Therefore, mode switching can only be valid when AUX output is 1, otherwise it will delay switching.
2	<ul style="list-style-type: none"> ● For example, users continuously inputs a large amount of data and simultaneously performs mode switching. At this time, the switching mode operation is invalid; the module will process all the user data before performing the new mode detection; ● Therefore, the general recommendation is to detect the output state of the AUX pin and switch after 2ms when the output is high.
3	<ul style="list-style-type: none"> ● When the module is switched from other modes to sleep mode, if the data has not been processed yet; ● The module will process these data (including receiving and sending) before entering sleep mode. This feature can be used for fast sleep, which saves power; for example, the transmitter module works in mode 0, the user transmits the serial port data "12345", and then does not have to wait for the AUX pin to be idle (high level), and can directly switch to sleep mode. And the user's main MCU immediately sleeps, the module will automatically transmit the user data through the wireless, and automatically enters sleep within 1ms; ● This saves MCU's working time and reduces power consumption.
4	<ul style="list-style-type: none"> ● Similarly, any mode switching can use this feature. After the module processes the current mode event, it will automatically enter the new mode within 1ms; thus eliminating the need for the user to query AUX and achieve the purpose of fast switching; ● For example, switching from the transmit mode to the receive mode; the user MCU can also enter sleep before the mode switch, and use the external interrupt function to acquire the AUX change, thereby performing mode switching.
5	<ul style="list-style-type: none"> ● This operation mode is very flexible and efficient, and is designed according to the user's MCU's operation convenience, and can reduce the workload of the entire system as much as possible, improve system efficiency, and reduce power consumption.

6.2 Normal mode (Mode 0)

Type	M0 = 0, M1 = 0
Transmitting	<p>The module can receive the user data via serial port, and transmit wireless data package of 58 bytes. When the data inputted by user is up to 58 byte, the module will start wireless transmission. During which the user can input data continuously for transmission.</p> <p>When the required transmission bytes are less than 58 bytes, the module will wait 3-byte time and treat it as data termination unless continuous data inputted by user. Then the module will transmit all the data through wireless channel.</p> <p>When the module receives the first data packet from user, the AUX outputs low level.</p> <p>After all the data are transmitted into RF chip and transmission start , AUX outputs high level.</p> <p>At this time, it means that the last wireless data package transmission is started, which enables the user to input another 512 bytes continuously. The data package transmitted from the module working in mode 0 can only be received by the</p>

	module working in mode 0 or 1.
Receiving	<p>The wireless receiving function of the module is on, the data packet transmitted from the module working in mode 0 & mode 1 can be received.</p> <p>After the data packet is received, the AUX outputs low level, 5ms later the module starts to transmit wireless data through serial port TXD pin.</p> <p>After all the wireless data have been transmitted via serial port, the AUX outputs high level.</p>

6.3 Wake up mode (Mode 1)

Type	M0 = 1, M1 =0
Transmitting	The condition of data packet transmission & AUX function is the same as mode 0. The only difference is that the module will add preamble code before each data packet automatically. The preamble code length depends on the wake-up time set in the user parameters. The purpose of the preamble code is waking up the receiving module works in mode 2. Therefore, the data package transmitted from mode 1 can be received by mode 0, mode1 and mode 2.
Receiving	The same as that in mode 0.

6.4 Power-saving mode (Mode 2)

Type	M0 = 0, M1 = 1
Transmitting	<p>UART is closed, the module cannot receive any serial port data from outside MCU.</p> <p>Hence the function of wireless transmission is not available for the module working in this mode.。</p>
Receiving	<p>In mode 2, it is required the data transmitter works in mode 1.</p> <p>The wireless module monitors the preamble code at regular time.</p> <p>Once it gets the preamble code, it will remain as receiving status and waiting for the completion of receiving the entire valid data package.</p> <p>Then the AUX outputs low level, 5ms later the serial port is open to transmit received wireless data through TXD. Finally, AUX outputs high level after process completed.</p> <p>The wireless module stays in “power-saving – monitoring” working status (polling).</p> <p>By setting different wake-up time, the module will have different receiving response delay (2s in maximum) and average power consumption (30uA in minimum).</p>

6.5 Deep sleep mode (Mode 3)

Type	M0 = 1, M1 = 1
Transmitting	Unable to transmit wireless data
Receiving	Unable to receive wireless data
Parameter setting	This mode can be used for parameter setting. It uses serial port 9600 & 8N1 to set module working parameters through specific instruction format. (please refer to parameters setting for details)
Note	When the mode changes from sleep mode to others, the module will reset its parameters, during which the AUX keeps low level and then outputs high level after reset completed. User is recommended to check the AUX rising edge.

7. Register read and write control

7.1 Command format

In sleep mode (mode 3: M0 = 0, M1 = 1), the list of supported commands are as follows (only 9600, 8N1 format is supported when):

No.	Instruction format	Illustration
1	C0+ working parameters	C0 + 5 bytes working parameters are sent in hexadecimal format. 6 bytes in total and must be sent in succession. (Save the parameters when power-down)
2	C1+C1+C1	Three C1 are sent in hexadecimal format. The module returns the saved parameters and must be sent in succession.
3	C2+working parameters	C2 + 5 bytes working parameters are sent in hexadecimal format. 6 bytes in total and must be sent in succession. (Do not save the parameters when power-down)
4	C3+C3+C3	Three C3 are sent in hexadecimal format. The module returns the version information and they must be sent in succession.
5	C4+C4+C4	Three C4 are sent in hexadecimal format. The module will reset one time and they must be sent in succession.

7.2 Factory default parameter

Factory default parameters: 62 00 00 00 00 00							
Model No.	Frequency	Address	Channel	Air data rate	Baud rate	Parity format	Power
E30-433T20S3	433MHz	0x0000	0x50	1kbps	9600	8N1	22dbm

7.3 Reading Operating Parameters

Instruction format	Description
C1+C1+C1	In sleep mode (M0=1, M1=1) , User gives the module instruction (HEX format): C1 C1 C1, Module returns the present configuration parameters. For example, C0 00 00 1A 17 44.

7.4 Reading Version Number

Instruction format	Description
C3+C3+C3	In sleep mode (M0=1, M1=1) , User gives the module instruction (HEX format): C3 C3 C3, Module returns its present version number, for example C3 32 xx yy; The second byte represents the frequency,if it is 32,means 433MHz; if it is 38,,means 470MHz;if it is 45,means 868MHz;if it is 44,means 915MHz;if it is 46,means 170MHz;xx is the version number and yy refers to the other module features.

7.5 Reset Instruction

Instruction format	Description
C4+C4+C4	In sleep mode (M0=1, M1=1) , User gives the module instruction (HEX format): C4 C4 C4, the module resets for one time. During the reset process, the module will conduct self-check, AUX outputs low level. After reset completing, the AUX outputs high level, then the module starts to work regularly which the working mode can be switched or be given another instruction.

7.6 Parameter Setting Instruction

0	Item	Description				Remark	
0	HEAD	Fix 0xC0 or 0xC2, it means this frame data is control command				Must be 0xC0 or 0xC2 C0: Save the parameters when power-down C2: Do not save the parameters when power-down	
1	ADDH	High address byte of module (the default 00H)				00H-FFH	
2	ADDL	Low address byte of module (the default 00H)				00H-FFH	
3	SPED	7	6	UART parity bit		<ul style="list-style-type: none"> UART mode can be different between communication parties 	
		0	0	8N1 (default)			
		0	1	8O1			
		1	0	8 E1			
		1	1	8N1 (equal to 0000)			
		5	4	3	TTL UART baud rate (bps)		<ul style="list-style-type: none"> UART mode can be different between communication parties The UART baud rate has nothing to do with wireless transmission parameters & won't affect the wireless transmit /receive features.
		0	0	0	1200bps		
		0	0	1	2400pbs		
		0	1	0	4800pbs		
		0	1	1	9600bps (default)		
1	0	0	19200bps				

		1	0	1	38400bps	<ul style="list-style-type: none"> The lower the air data rate, the longer the transmitting distance, better anti-interference performance and longer transmitting time The air data rate must keep the same for both communication parties. 	
		1	1	0	57600bps		
		1	1	1	115200bps		
		2	1	0	Air data rate (bps)		
		0	0	0	1k bps		
		0	0	1	2kbps		
		0	1	0	5kbps (Default)		
		0	1	1	8kbps		
		1	0	0	10kbps		
		1	0	1	15kbps		
		1	1	0	20kbps		
		1	1	1	25kbps		
4	CHAN	Communication channel			00H-FFH, for 425 ~ 450.5MHz		
		4 ~0, Communication frequency (425M + CHAN * 0.1M) , default 50H (433M)					
5	OPTION	7	Fixed transmission (similar to MODBUS)			<ul style="list-style-type: none"> In fixed transmission mode, the first three bytes of each user's data frame can be used as high/low address and channel. The module changes its address and channel when transmit. And it will revert to original setting after complete the process. 	
		0	Transparent transmission mode				
		1	Fixed transmission mode			<ul style="list-style-type: none"> This bit is used to the module internal pull-up resistor. It also increases the level's adaptability in case of open drain. But in some cases, it may need external pull-up resistor. 	
		6	IO drive mode (the default 1)				
		1	TXD、AUX push-pull outputs, RXD pull-up inputs			<ul style="list-style-type: none"> The transmit & receive module work in mode 0, whose delay time is invalid & can be arbitrary value. 	
		0	TXD、AUX open-collector outputs, RXD open-collector inputs				
		5	4	3	wireless wake-up time		<ul style="list-style-type: none"> The transmitter works in mode 1 can transmit the preamble code of the corresponding time continuously. When the receiver works in mode 2, the time means the monitor interval time(wireless wake-up). Only the data from transmitter that works in mode 1 can be received.
		0	0	0	250ms (default)		
		0	0	1	500ms		
		0	1	0	750ms		
		0	1	1	1000ms		
		1	0	0	1250ms		
1	0	1	1500ms				
1	1	0	1750ms				
1	1	1	2000ms				

	2	FEC switch			<ul style="list-style-type: none"> After turn off FEC, the actual data transmission rate increases while anti-interference ability decreases. Also the transmission distance is relatively short. Both communication parties must keep on the same pages about turn-on or turn-off FEC. 				
	0	Turn off FEC							
	1	Turn on FEC (Default)							
	1	0	transmission power (approximation)		<ul style="list-style-type: none"> The external power must make sure the ability of current output more than 250 mA and ensure the power supply ripple within 100mV. Low power transmission is not recommended due to its low power supply efficiency. 				
	0	0	20dBm (Default)						
	0	1	17dBm						
	1	0	14dBm						
	1	1	10dBm						
	For example: The meaning of No.3 "SPED" byte								
	The binary bit of the byte	7	6	5	4	3	2	1	0
The specific value (configured by user)	0	0	0	1	1	0	1	0	
Meaning	UART parity bit 8N1		UART baud rate is 9600			Air data rate is 2.4k			
Corresponding hexadecimal	1			A					

8. Hardware design

- It is recommended to use a DC stabilized power supply. The power supply ripple factor is as small as possible, and the module needs to be reliably grounded.;
- Please pay attention to the correct connection of the positive and negative poles of the power supply. Reverse connection may cause permanent damage to the module;
- Please check the power supply to ensure it is within the recommended voltage otherwise when it exceeds the maximum value the module will be permanently damaged;
- Please check the stability of the power supply, the voltage can not be fluctuated frequently;
- When designing the power supply circuit for the module, it is often recommended to reserve more than 30% of the margin, so the whole machine is beneficial for long-term stable operation.;
- The module should be as far away as possible from the power supply, transformers, high-frequency wiring and other parts with large electromagnetic interference.;
- High-frequency digital routing, high-frequency analog routing, and power routing must be avoided under the module. If it is necessary to pass through the module, assume that the module is soldered to the Top Layer, and the copper is spread on the Top Layer of the module contact part(well grounded), it must be close to the digital part of the module and routed in the Bottom Layer;
- Assuming the module is soldered or placed over the Top Layer, it is wrong to randomly route over the Bottom Layer or other layers, which will affect the module's spurs and receiving sensitivity to varying degrees;

- It is assumed that there are devices with large electromagnetic interference around the module that will greatly affect the performance. It is recommended to keep them away from the module according to the strength of the interference. If necessary, appropriate isolation and shielding can be done;
- Assume that there are traces with large electromagnetic interference (high-frequency digital, high-frequency analog, power traces) around the module that will greatly affect the performance of the module. It is recommended to stay away from the module according to the strength of the interference. If necessary, appropriate isolation and shielding can be done.
- If the communication line uses a 5V level, a 1k-5.1k resistor must be connected in series (not recommended, there is still a risk of damage);
- Try to stay away from some physical layers such as TTL protocol at 2.4GHz , for example: USB3.0;
- The mounting structure of antenna has a great influence on the performance of the module. It is necessary to ensure that the antenna is exposed, preferably vertically upward. When the module is mounted inside the case, use a good antenna extension cable to extend the antenna to the outside;
- The antenna must not be installed inside the metal case, which will cause the transmission distance to be greatly weakened.

9. FAQ

9.1 Communication range is too short

- The communication distance will be affected when obstacle exists.
- Data lose rate will be affected by temperature, humidity and co-channel interference.
- The ground will absorb and reflect wireless radio wave, so the performance will be poor when testing near ground.
- Sea water has great ability in absorbing wireless radio wave, so performance will be poor when testing near the sea.
- The signal will be affected when the antenna is near metal object or put in a metal case.
- Power register was set incorrectly, air data rate is set as too high (the higher the air data rate, the shorter the distance).
- The power supply low voltage under room temperature is lower than 2.5V, the lower the voltage, the lower the transmitting power.
- Due to antenna quality or poor matching between antenna and module.

9.2 Module is easy to damage

- Please check the power supply source, ensure it is 2.0V~3.6V, voltage higher than 3.6V will damage the module.
- Please check the stability of power source, the voltage cannot fluctuate too much.
- Please make sure antistatic measure are taken when installing and using, high frequency devices have electrostatic susceptibility.
- Please ensure the humidity is within limited range, some parts are sensitive to humidity.
- Please avoid using modules under too high or too low temperature.

9.3 BER(Bit Error Rate) is high


- There are co-channel signal interference nearby, please be away from interference sources or modify frequency and channel to avoid interference;
- Poor power supply may cause messy code. Make sure that the power supply is reliable.
- The extension line and feeder quality are poor or too long, so the bit error rate is high;

10. Production guidance

10.1 Reflow soldering temperature

Profile Feature	Curve characteristics	Sn-Pb Assembly	Pb-Free Assembly
Solder Paste	Solder paste	Sn63/Pb37	Sn96.5/Ag3/Cu0.5
Preheat Temperature min (T _{smin})	Min preheating temp.	100°C	150°C
Preheat temperature max (T _{smax})	Mx preheating temp.	150°C	200°C
Preheat Time (T _{smin} to T _{smax})(ts)	Preheating time	60-120 sec	60-120 sec
Average ramp-up rate(T _{smax} to T _p)	Average ramp-up rate	3°C/second max	3°C/second max
Liquidous Temperature (TL)	Liquid phase temp.	183°C	217°C
Time (tL) Maintained Above (TL)	Time below liquid phase line	60-90 sec	30-90 sec
Peak temperature (T _p)	Peak temp.	220-235°C	230-250°C
Average ramp-down rate (T _p to T _{smax})	Average ramp-down rate	6°C/second max	6°C/second max
Time 25°C to peak temperature	Time to peak temperature for 25°C	max 6 minutes	max 8 minutes

10.2 Reflow soldering curve

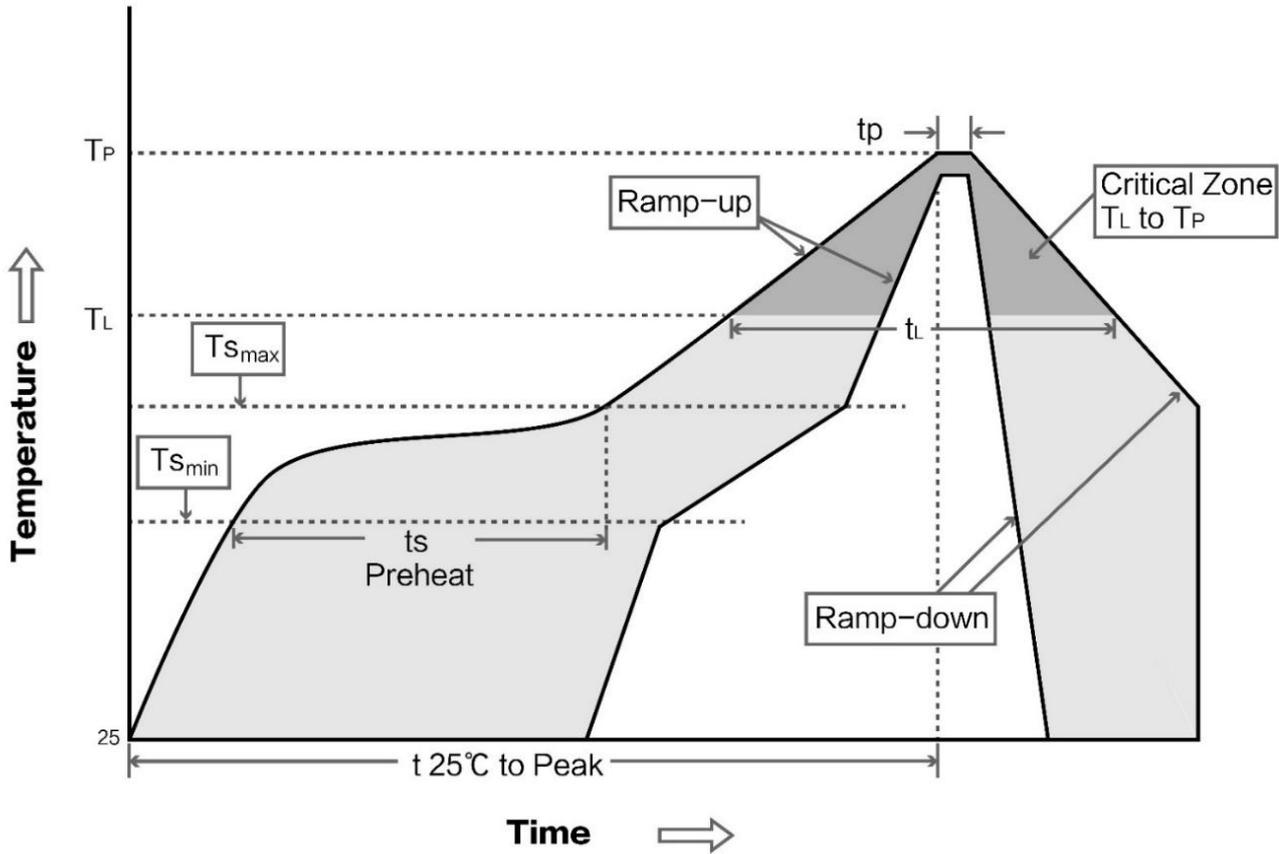

11. E30 series

Model No.	Core IC	Frequency Hz	Tx power dBm	Distance km	Package	Size mm	Antenna
E30-433T20S3	SI4438	433M	20	2.5	SMD	16 * 26	IPEX/Stamp hole
E30-780T20S	SI4463	780M	20	2.5	SMD	17 * 30	IPEX/Stamp hole/Spring antenna
E30-868T20D	SI4463	868M	20	2.5	DIP	21 * 36	SMA-K
E30-868T20S	SI4463	868M	20	2.5	SMD	17 * 30	IPEX/Stamp hole/Spring antenna
E30-170T27D	SI4463	170M	27	5	DIP	24 * 43	SMA-K
E30-170T20D	SI4463	170M	20	2	DIP	21 * 36	SMA-K
E30-915T20S	SI4463	915M	20	2.5	SMD	17 * 30	IPEX/Stamp hole/Spring antenna
E30-915T20D	SI4463	915M	20	2.5	DIP	21 * 36	SMA-K
E30-490T20S	SI4438	490M	20	2.5	SMD	17 * 30	IPEX/Stamp hole/Spring


							antenna
E30-490T20D	SI4438	490M	20	2.5	DIP	21 * 36	SMA-K
E30-433T20S	SI4438	433M	20	2	SMD	17 * 30	IPEX/Stamp hole/Spring antenna
E30-433T20D	SI4438	433M	20	2	SMD	21 * 36	SMA-K

12. Antenna recommendation

The antenna is an important role in the communication process. A good antenna can largely improve the communication system. Therefore, we recommend some antennas for wireless modules with excellent performance and reasonable price.

Model No.	Type	Frequency Hz	Interface	Gain dBi	Height	Cable	Function feature
TX433-NP-4310	Flexible PCB antenna	433M	SMA-J	2	43.8*9.5mm	-	Flexible, FPC soft antenna
TX433-JW-5	Rubber antenna	433M	SMA-J	2	50mm	-	Flexible & omnidirectional
TX433-JWG-7	Rubber antenna	433M	SMA-J	2.5	75mm	-	Flexible & omnidirectional
TX433-JK-20	Rubber antenna	433M	SMA-J	3	210mm	-	Flexible & omnidirectional
TX433-JK-11	Rubber antenna	433M	SMA-J	2.5	110mm	-	Flexible & omnidirectional
TX433-XP-200	Sucker antenna	433M	SMA-J	4	19cm	200cm	Flexible & omnidirectional
TX433-XP-100	Sucker antenna	433M	SMA-J	3.5	18.5cm	100cm	Sucker antenna, High gain
TX433-XP-300	Sucker antenna	433M	SMA-J	6	96.5cm	300cm	Sucker antenna, High gain
TX433-JZG-6	Rubber antenna	433M	SMA-J	2.5	52mm	-	Short straight & omnidirectional
TX433-JZ-5	Rubber antenna	433M	SMA-J	2	52mm	-	Short straight & omnidirectional

13. Package for batch order

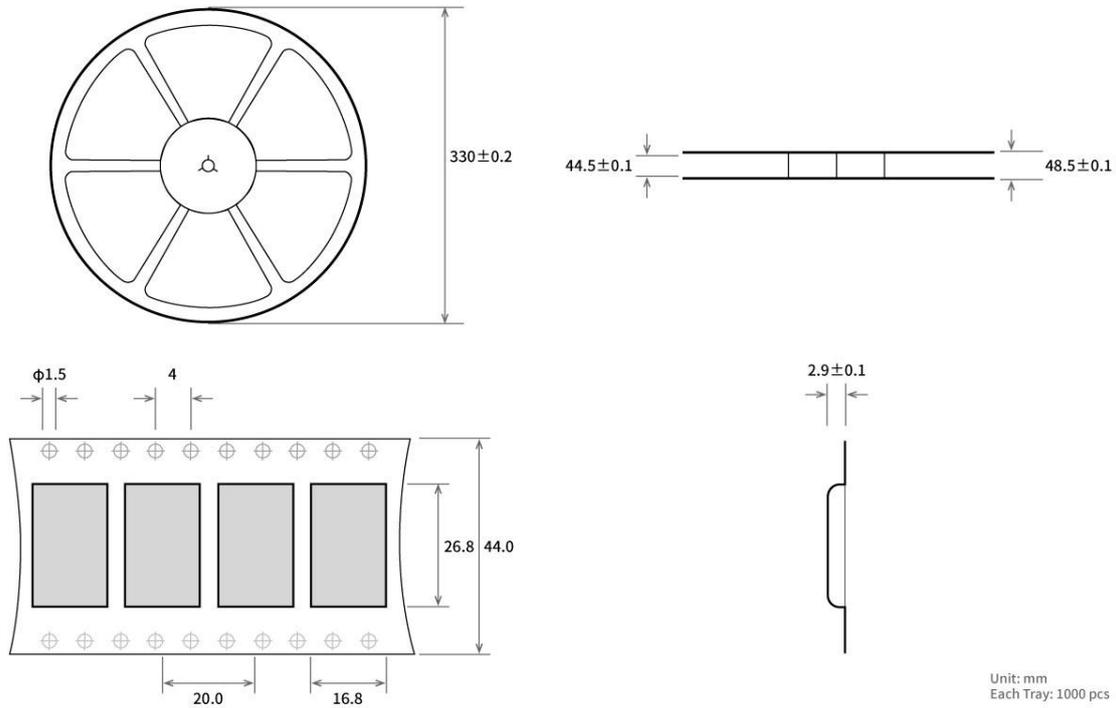

14.Revision history

Version	Date	Description	Issued by
1.00	2017-11-17	Initial version	huaa
1.20	2018-01-29	Content updated	huaa
1.30	2018-10-17	Model No. split	huaa
1.40	2020-03-05		Ren
1.50	2020-7-9		Li

15.About us

Technical support: support@cdebyte.com

Documents and RF Setting download link: www.ebyte.com

Thank you for using Ebyte products! Please contact us with any questions or suggestions: info@cdebyte.com

Fax: 028-64146160 ext. 821

Web: www.ebyte.com

Address: BuildingB5,MouldIndustrialPark,199#XiquAvenue,Chengdu,Sichuan

